


# WPC Decking Installation

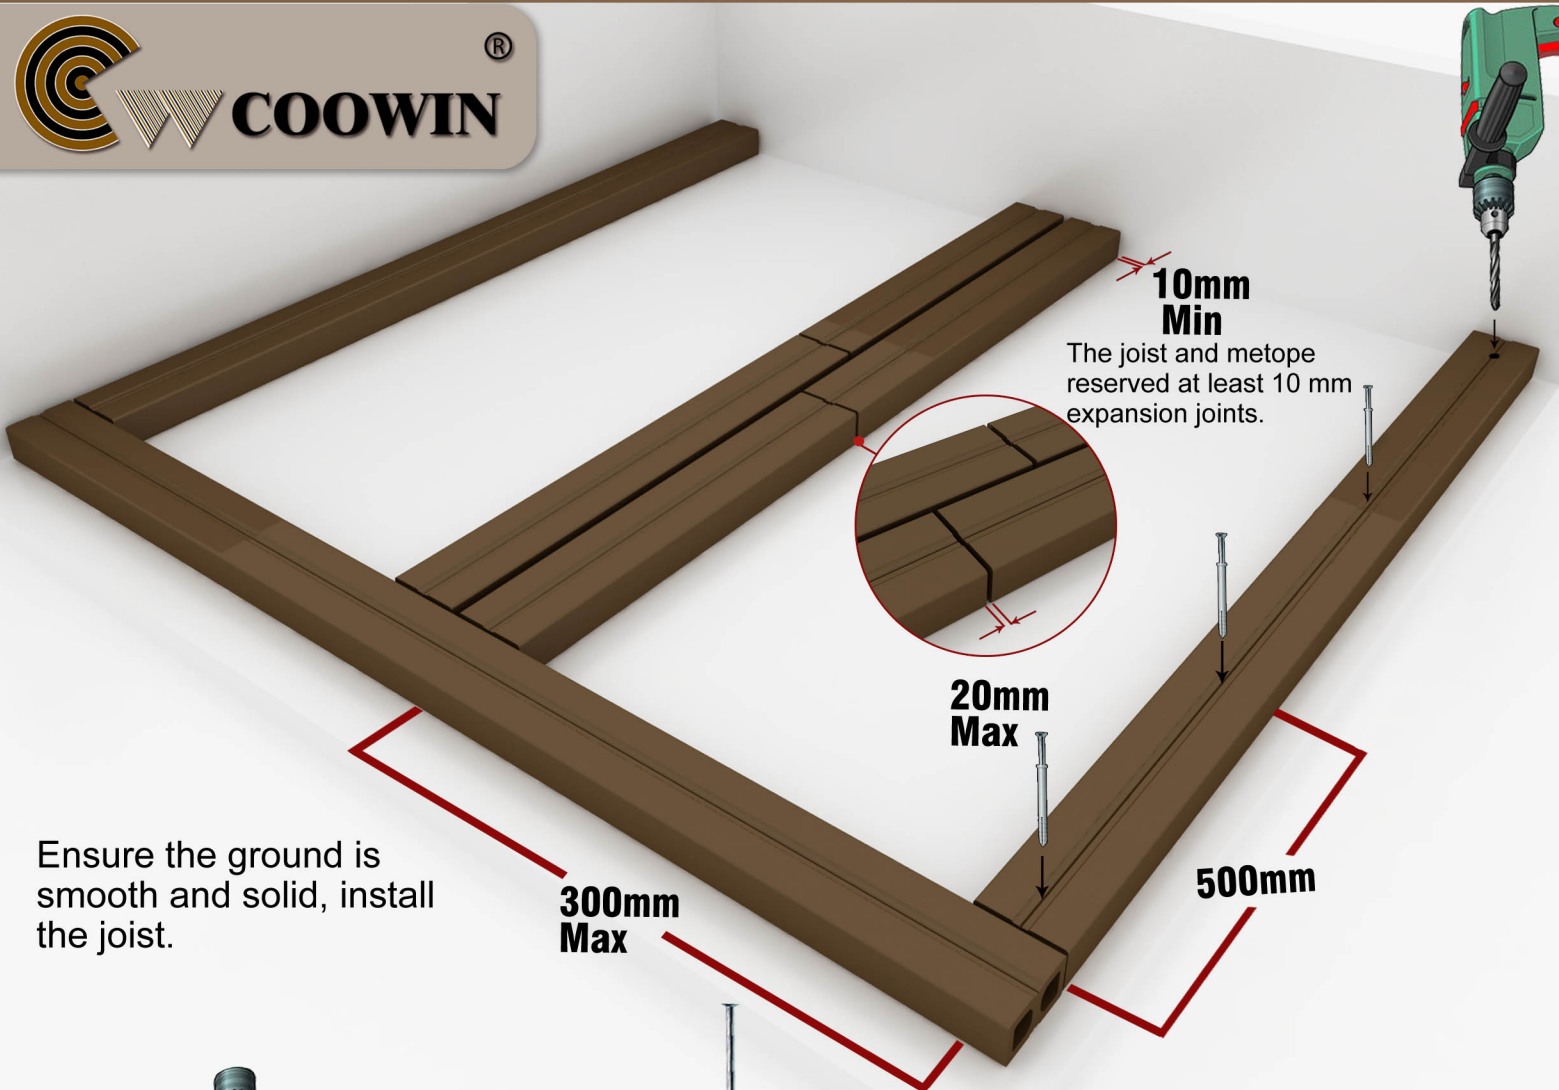



Ensure the ground is smooth and solid, install the joist.

**10mm Min**  
The joist and metope reserved at least 10 mm expansion joints.


**20mm Max**

**300mm Max**

**500mm**

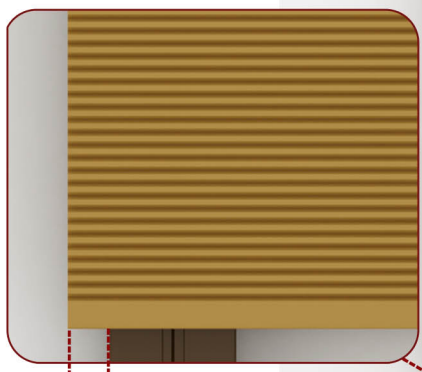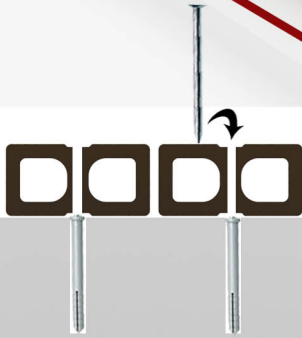

**10mm Max**

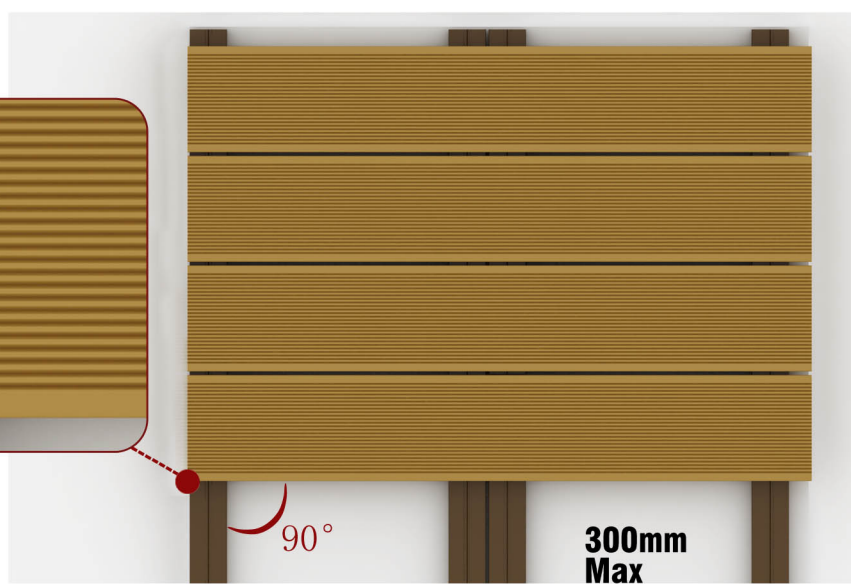



90°

**300mm Max**

## Fixed joist

When installation, the WPC decking must be perpendicular to the joist.


# WPC Decking Installation

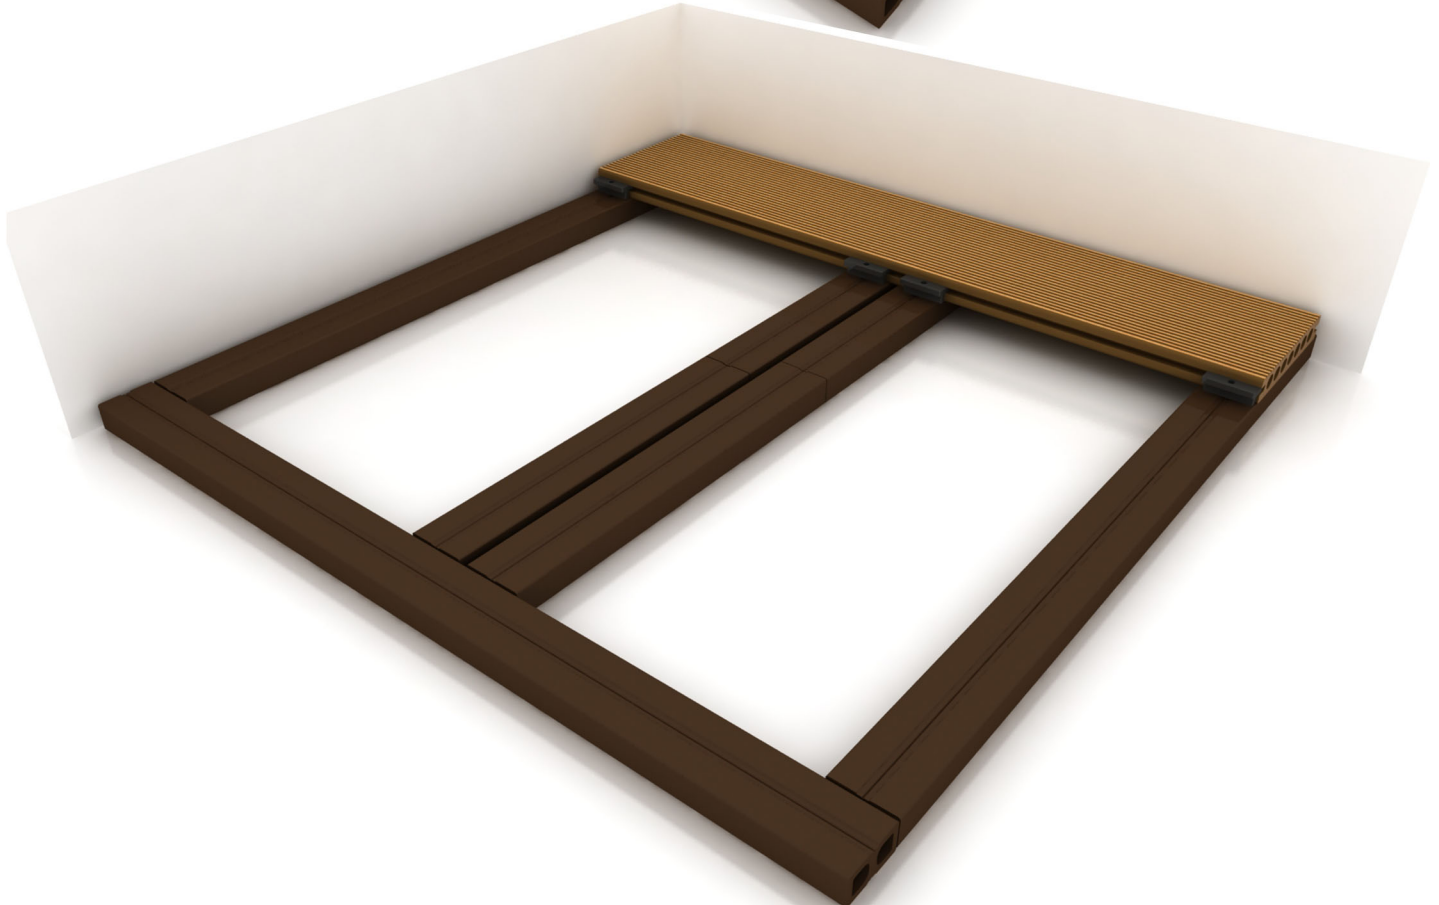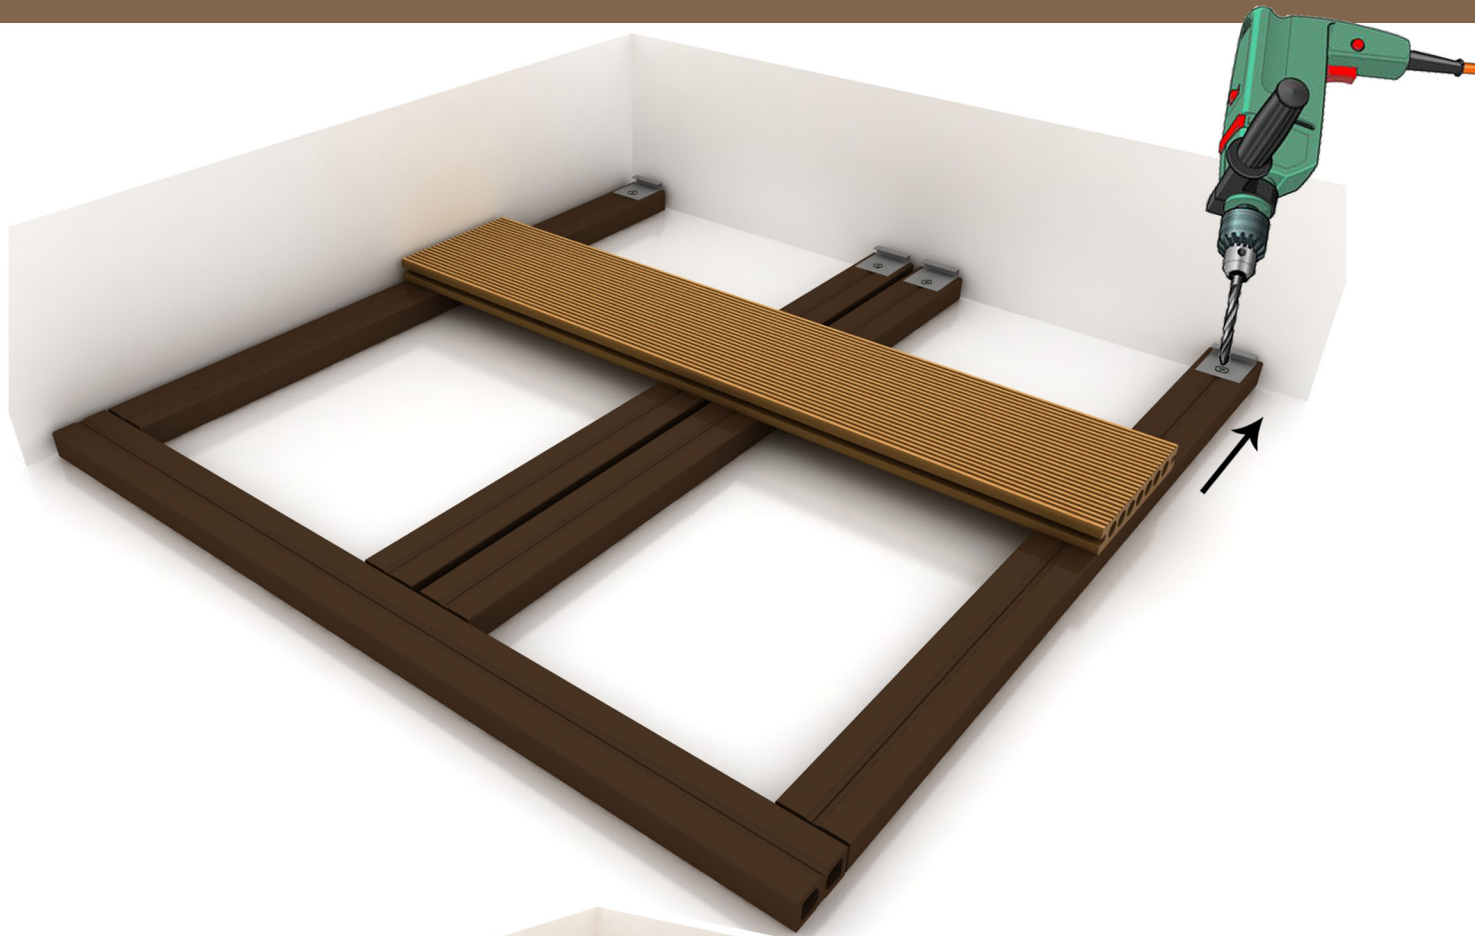

2




Composite Decking  
**COOWIN GROUP**

# WPC Decking Installation

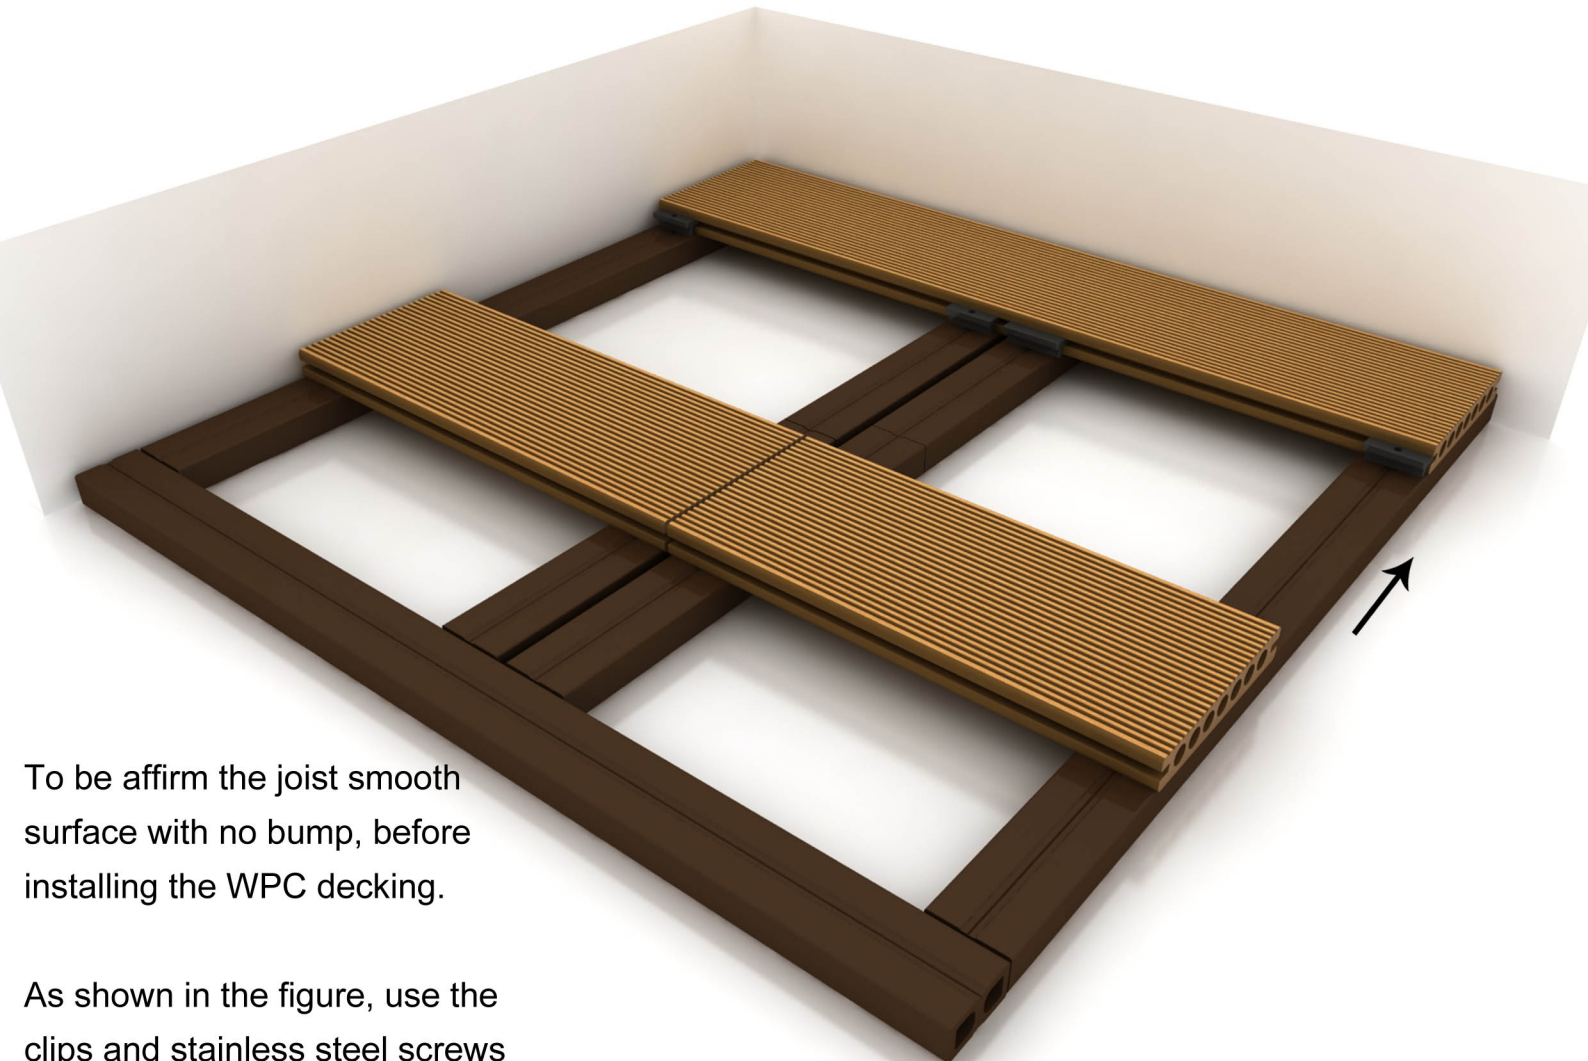


To be affirm the joist smooth surface with no bump, before installing the WPC decking.

As shown in the figure, use the clips and stainless steel screws fixed installation

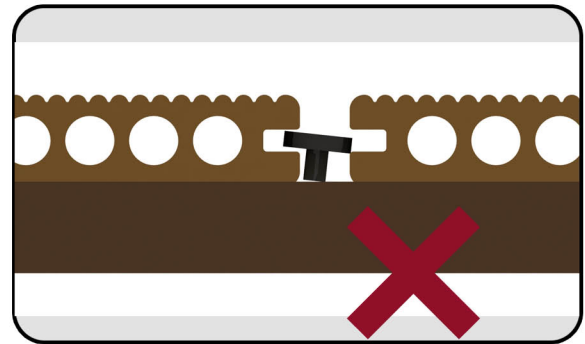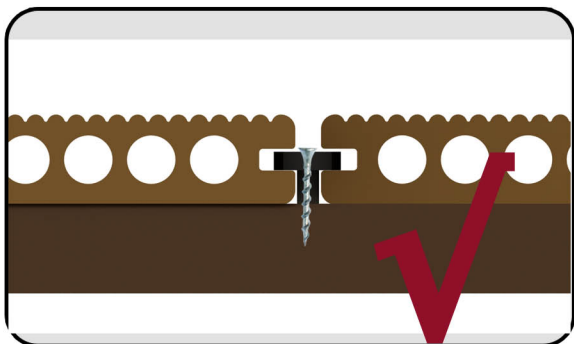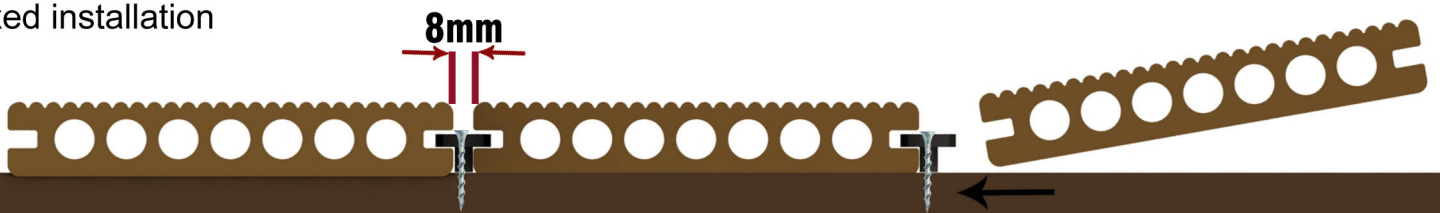

Composite Decking  
**COOWIN GROUP**


# WPC Decking Installation

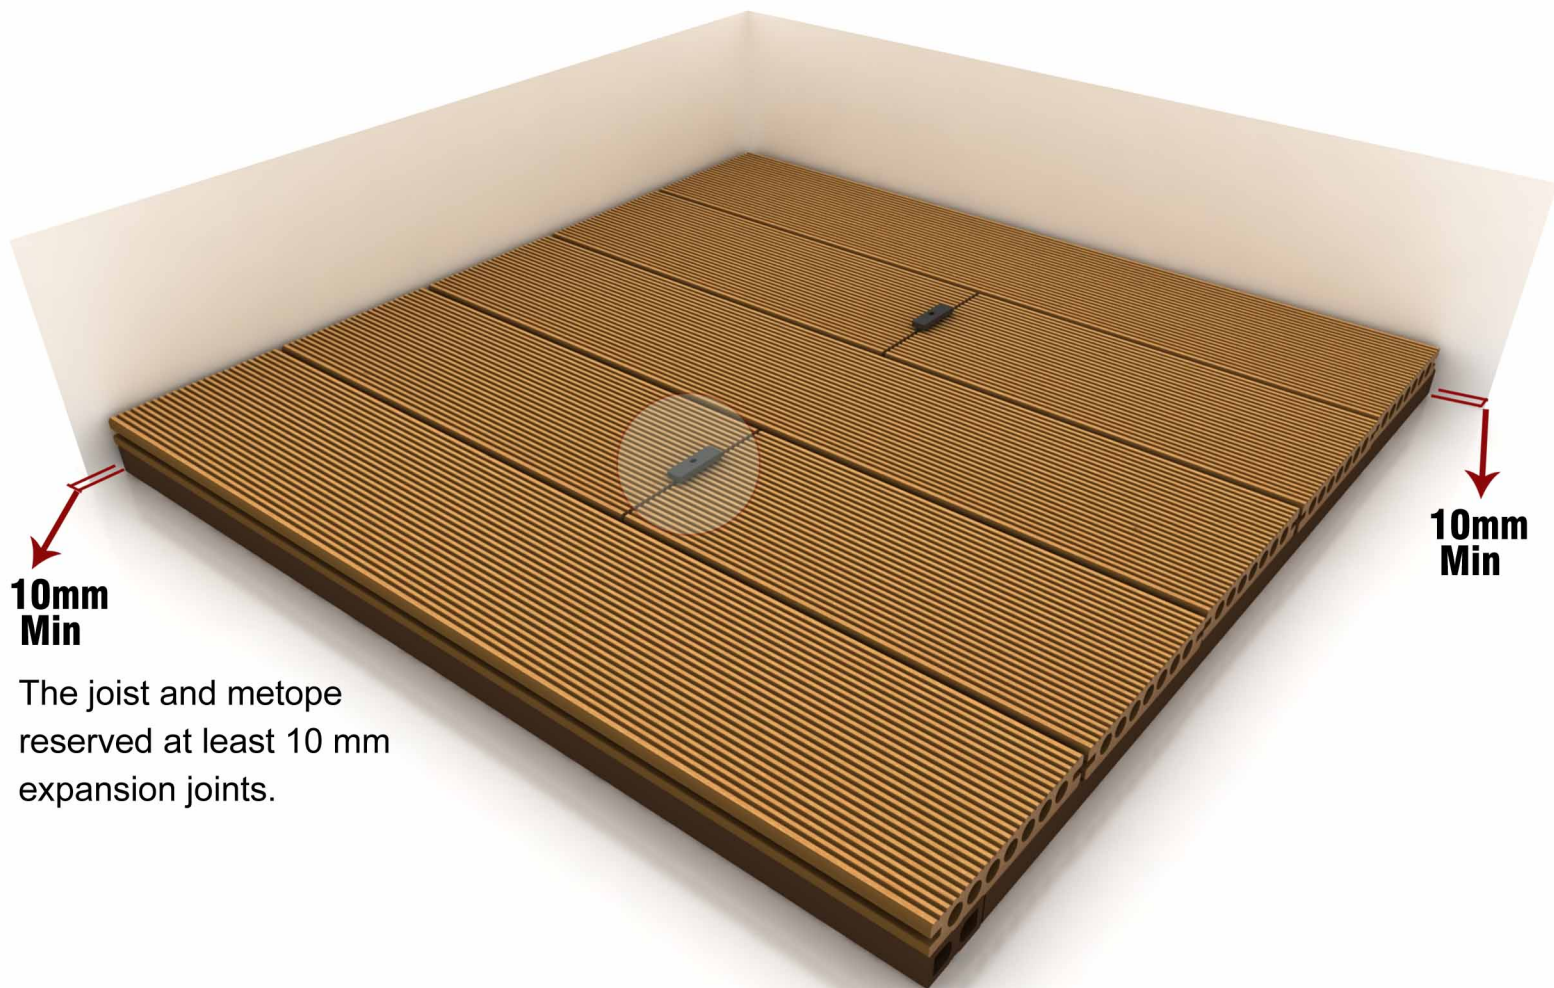

**10mm  
Min**

The joist and metope reserved at least 10 mm expansion joints.

**10mm  
Min**

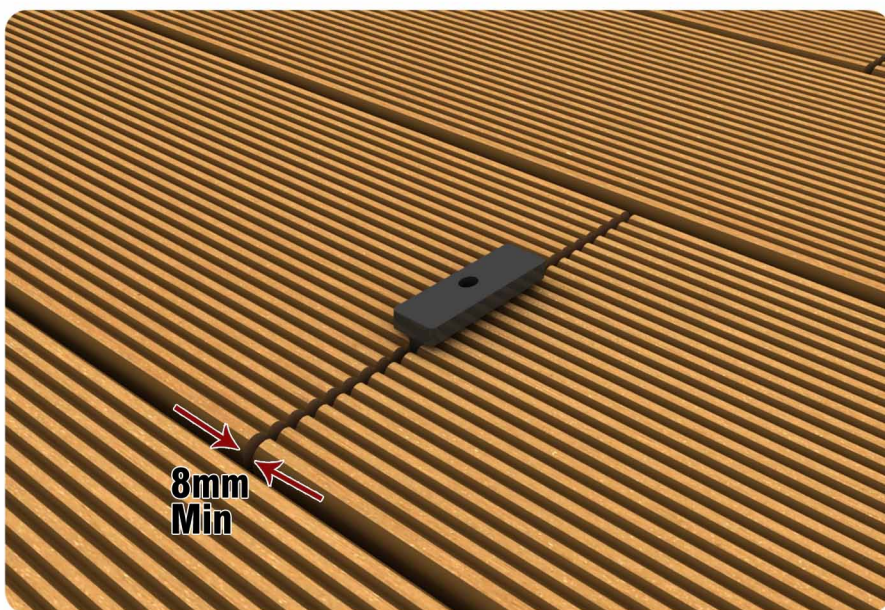

**8mm  
Min**


With the clips for reference, make sure the reserved expansion joints between two WPC decks at least 8mm.





**4**

Composite Decking  
**COOWIN GROUP**

# WPC Decking Installation

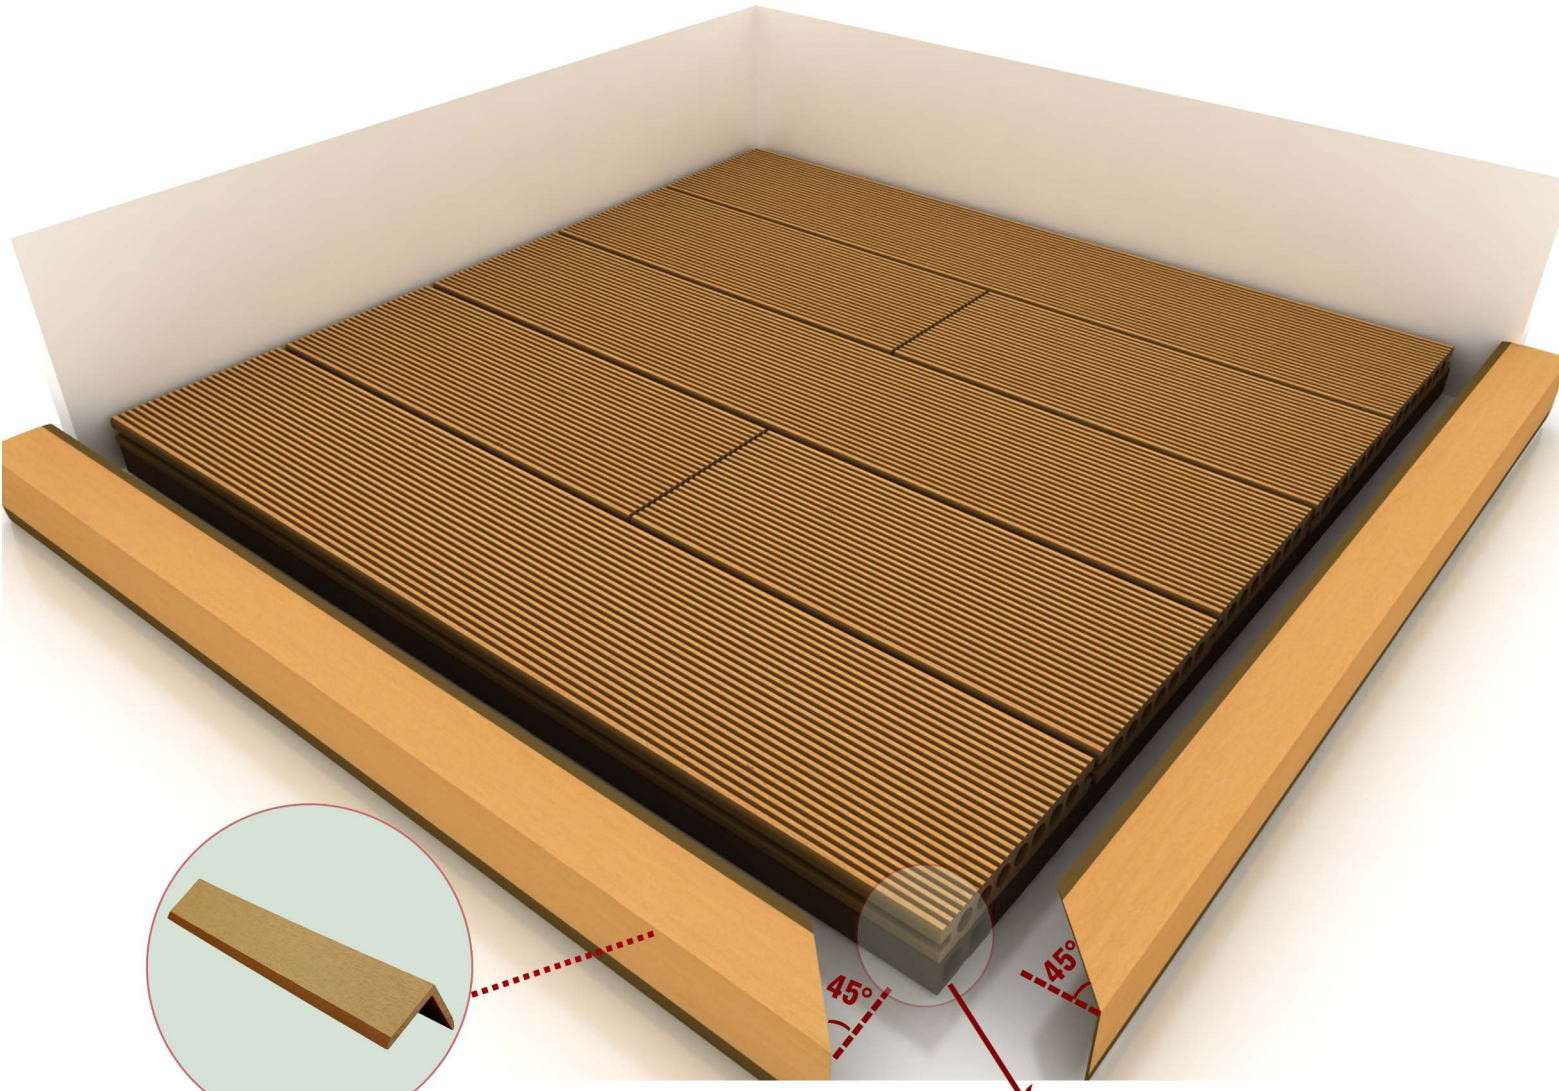

Cutting the L-corner to 45 degrees and stitching at the corner of the terrace decking.

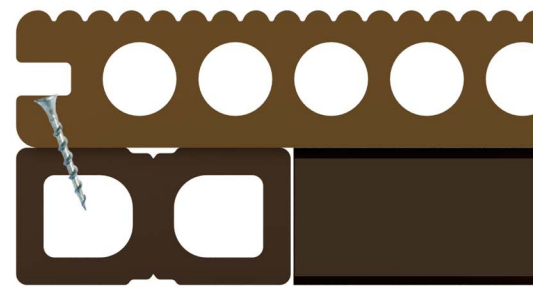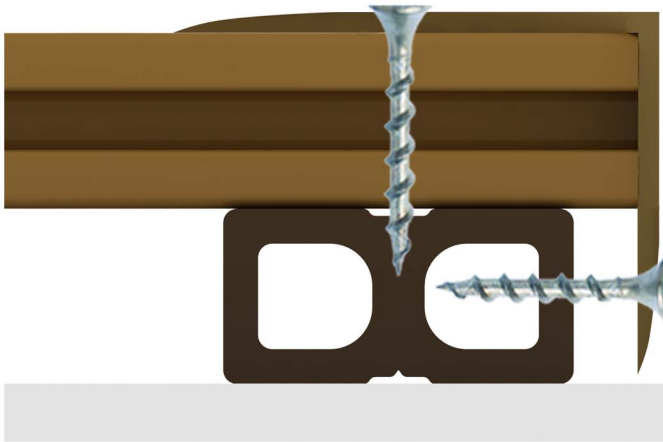

The first piece WPC deck fixation, use the screw 45 degrees oblique drilled into the WPC deck and joist.

Fixed the L corner with screws to complete the installation.




5

Composite Decking  
**COOWIN GROUP**

# WPC Decking Installation

**Installation finished.**

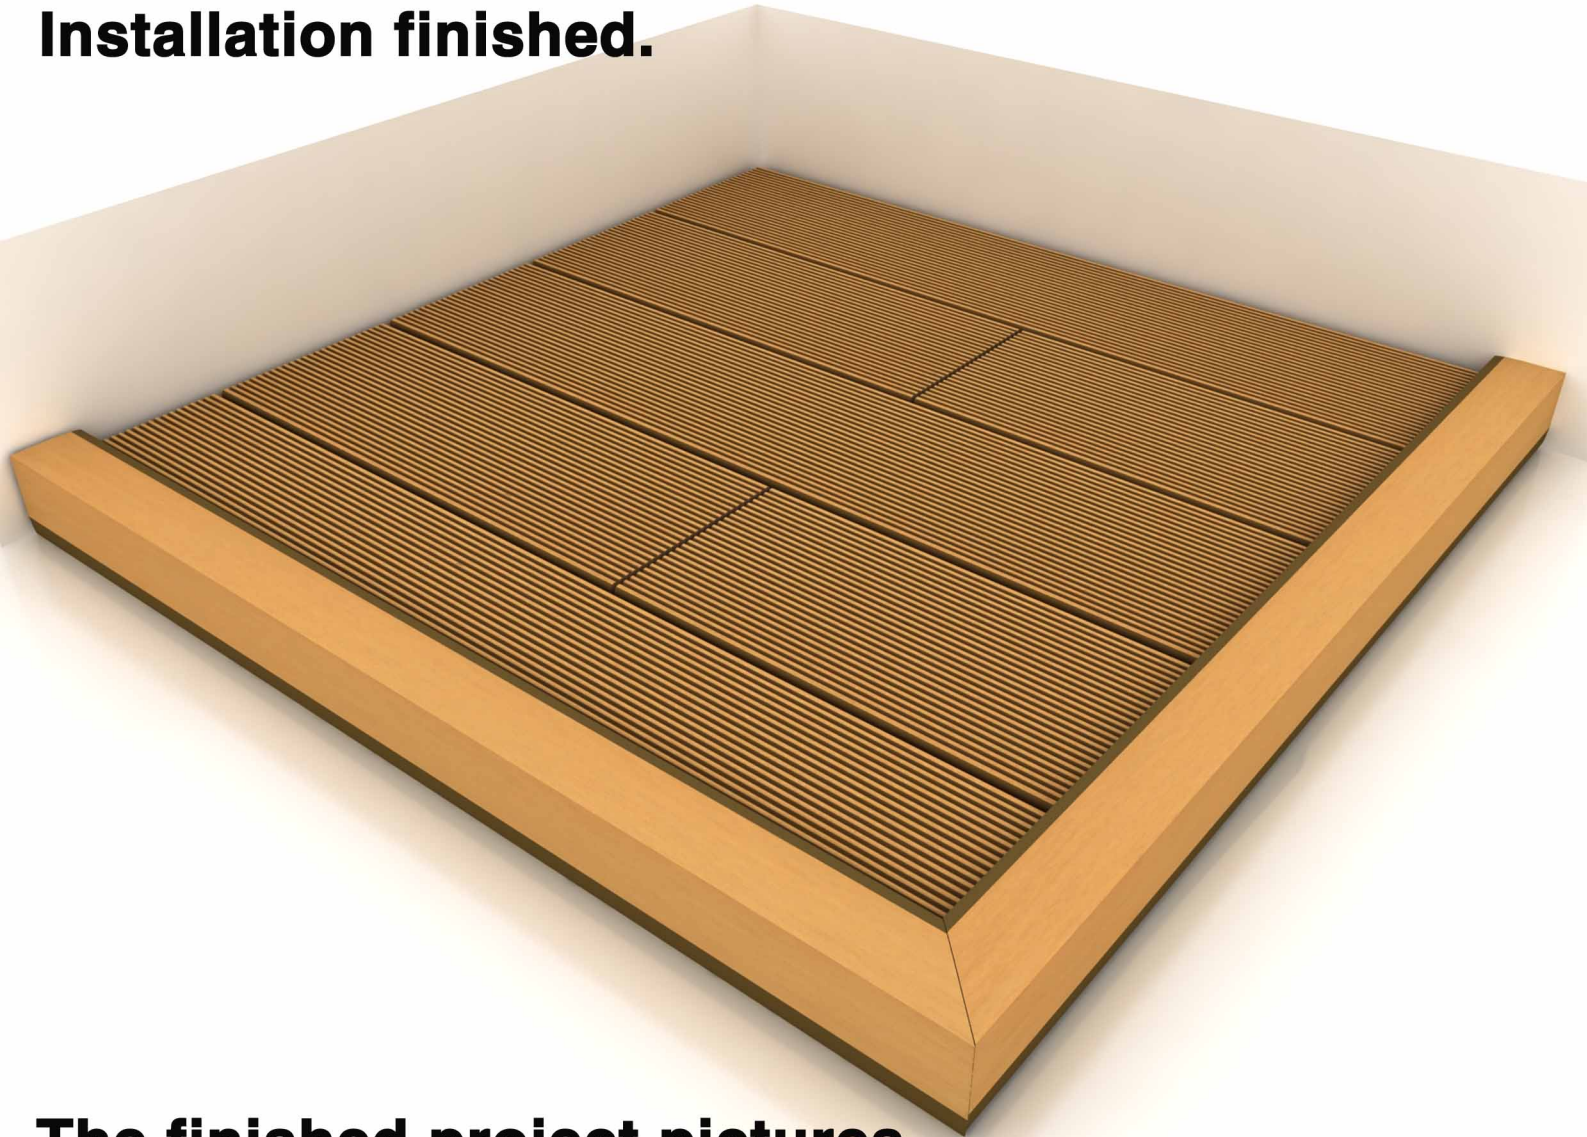

**The finished project pictures.**

